


Ram Small Apex Canopy Fitting Instructions

- 1 Hold the canopy in place centrally above your doorway and mark out 4 hole roughly in the pattern in fig 1, on the back inner face of the canopy, ensuring that the holes line up with brick work not mortar lines(or appropriate structure in the case of a park home). CHECK AT ALL STAGES THAT THE CANOPY IS LEVEL USING A SPIRIT LEVEL.

FIG1

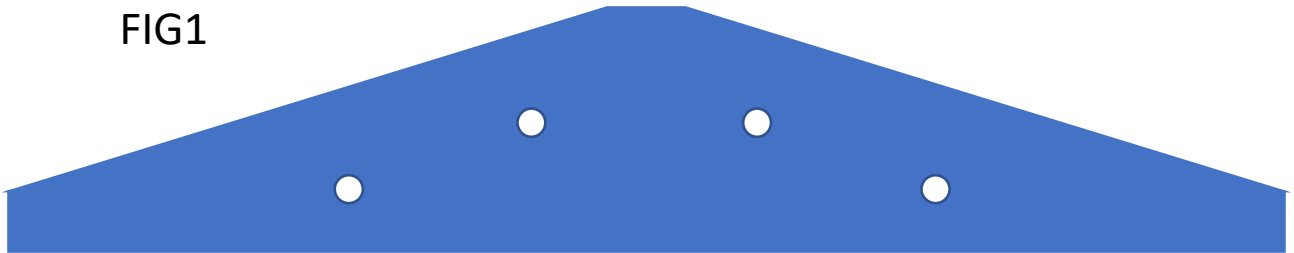

- 2 Remove the canopy from the wall and drill the 4 holes with a 10mm wood drill through the back face
- 3 Hold canopy back in place and mark the 4 holes on the brick work
- 4 Remove canopy and drill the 4 holes in the brick work 75mm deep with a 10mm masonry drill
- 5 Apply a mastic /sealant bead across the full width of the out back face of the canopy that is to be in touch with the brick work
- 6 Tap the 4 raw bolts through the back face of canopy then hold the canopy back in position
- 7 Tap the 4 raw bolts into the brick work until the flange face of the raw plug touches the back face of the canopy
- 8 Tighten each of the bolts until tight against the face of the canopy

